从这里开始

Start Here



注意: 在第 16 步之前请不要连接 USB 电缆, 否则可能无法正确安装软件。 请按顺序执行各个步骤。

如果在安装期间遇到问题,请参阅最后一节中的疑难排解。


Important: Do not connect the USB cable until Step 16 or software may not install properly. Follow the steps in order.

If you have problems during setup, see **Troubleshooting** in the last section.



取下所有的胶带和里面的扣锁

Remove all tape and inside lock

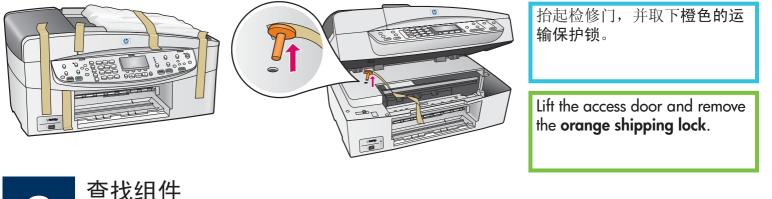



Windows CD



Macintosh 光盘 ٨



《使用手册》



Nacintosh CD	



USB 电缆* USB cable*



adapter

* 需要单独购买。 包装盒内的物品可能有所不同。

* Purchased separately. The contents of your box may differ.

控制面板盖(可能已装上)

control-panel overlay (may be attached)



电话线 phone cord



上(出纸)盒 top (output) tray


下纸盒 bottom paper tray



HP Officejet 6200 series all-in-one Setup Guide



Attach the control-panel overlay (if not attached)

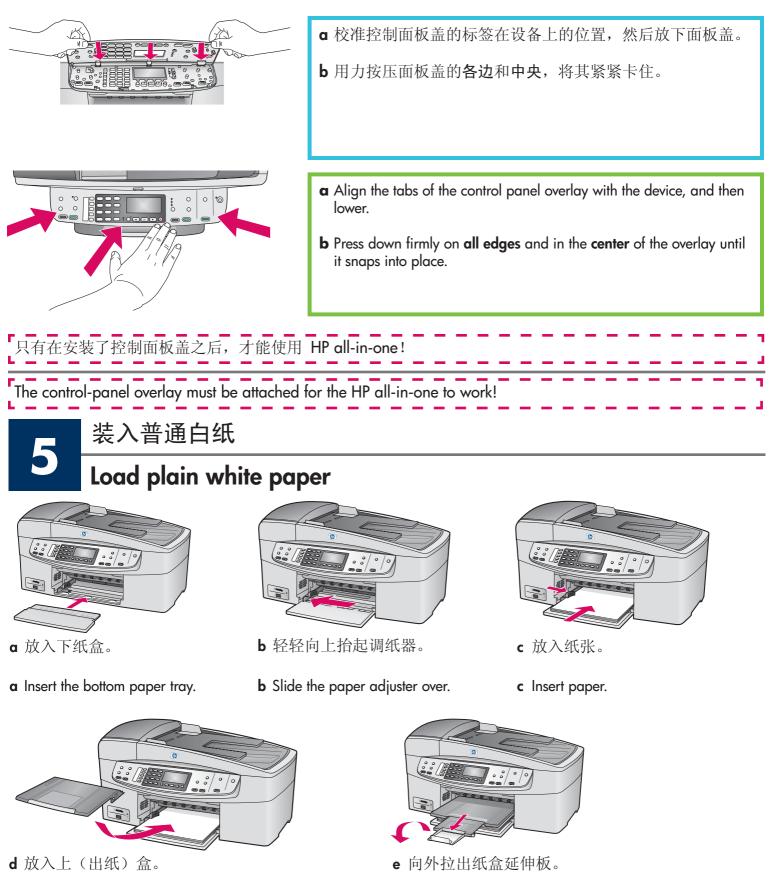

e Pull, and then flip the tray extender out.


d Insert the top (output) tray.

6

Connect the power cord and adapter

	注意: 在第 16 步之前请不要连接 USB 电缆, 否则可能无法正确安装软件。请按 顺序执行各个步骤。
	Important: Do not connect the USB cable until Step 16 or software may not install properly. Follow the steps in order.
连接配套提供的电话线	

Connect the supplied phone cord

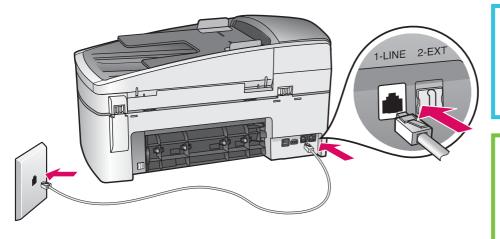


将电话线的一端连到左侧 (1-LINE), 进线)的电话端口中,然后将另一端 插入墙上的插孔中。

Connect one end of the supplied phone cord to the phone port on the left **(1-LINE)** and the other to a wall jack.

若要连接答录机或者使用其它的电话线,请参阅《使用手册》。

To connect an answering machine or use a different phone cord, see the User Guide.


在按下 打开 按钮前,请确保从设备里面取下橙色运输保护锁。	i i
Make sure to remove the orange shipping lock from inside the device before you press the On button.	- 1

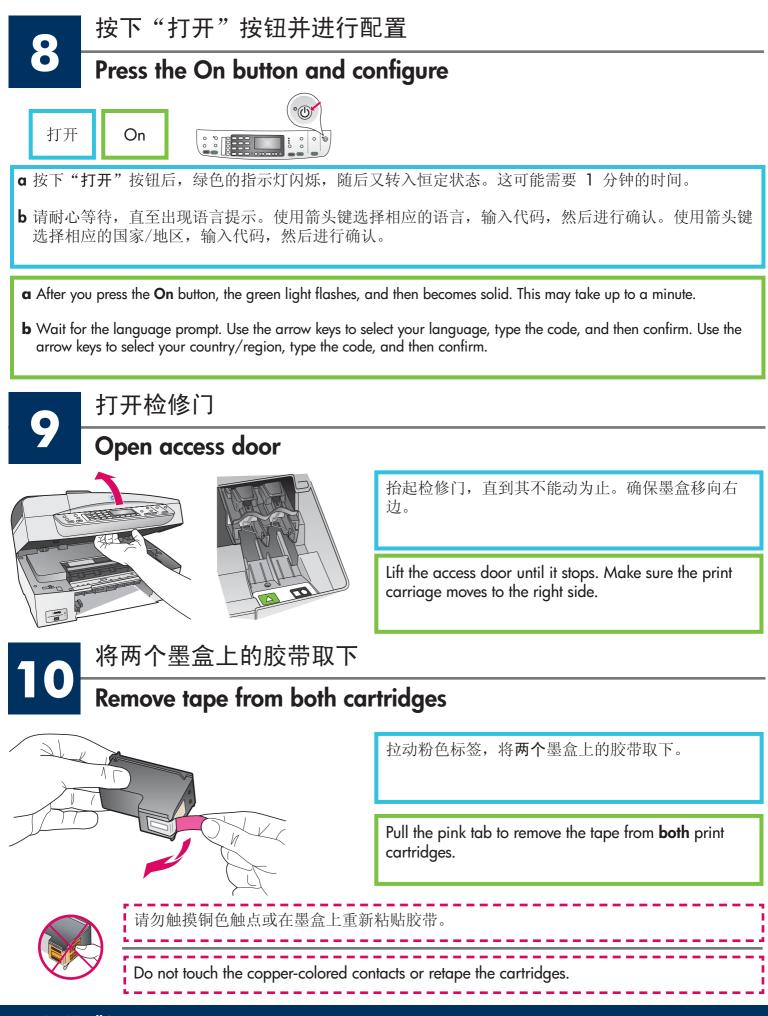


放入三色墨盒

Insert the tri-color print cartridge



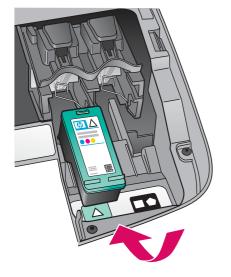

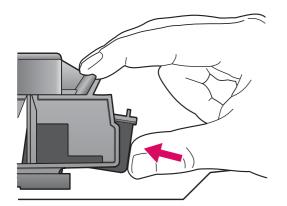


只有打开设备后,才能放入墨盒。 a 握住三色墨盒, 使 HP 标签朝上。 **b** 将三色盒放在左侧插槽的前方。 c 用力将墨盒推入该插槽中,将其紧紧卡住。 The device must be **On** before you can insert the print cartridges. **a** Hold the **tri-color** print cartridge with the HP label facing up. **b** Place the **tri-color** print cartridge in front of the **left** slot. c Push the cartridge firmly into the slot until it snaps into place. 放入黑色墨盒

2 Insert the black print cartridge






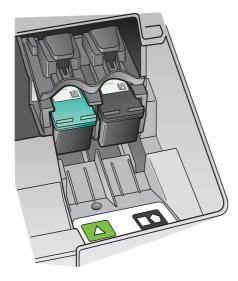

- a 握住黑色墨盒, 使 HP 标签朝上。
- **b** 将黑色墨盒放在**右侧**插槽的前方。
- c 用力将墨盒推入该插槽中,将其紧紧卡住。
- d 关闭检修门。

- ${\boldsymbol{\alpha}}$ Hold the ${\boldsymbol{\mathsf{black}}}$ print cartridge with the HP label facing up.
- **b** Place the **black** print cartridge in front of the **right** slot.
- **c** Push the cartridge firmly into the slot until it snaps into place.
- ${\boldsymbol{\mathsf{d}}}$ Close the access door.

校准墨盒 Align the print cartridges

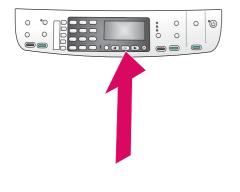

a 每当出现提示,要求开始校准墨盒时,请按下控制面 板上的"确定"。

校准过程可能需要几分钟的时间。

b 当打印出校准页后,校准过程便结束了。通过显示屏 查看相关状态,然后按"确定"。如果校准失败,请 参阅最后一节中的**疑难排解**。

回收或丢弃校准页。

- **a** Press **OK** at each of the prompts on the control panel to start print cartridge alignment.

The alignment may take a few minutes.

b After the page prints, alignment is complete. Check the display for the status, and then press **OK**. If it fails, see **Troubleshooting** in the last section.

Recycle or discard the alignment page.


如果没有将设备与计算机相连,请接着查阅《使用手册》中的 Fax Setup(传真设置),了解如何完成 传真设置。 If you are not connecting the device to a computer, continue to the Fax Setup chapter in the User Guide for information on how to finish fax setup. 启动计算机

Turn on your computer



a 启动计算机,根据需要进行登录,然后等待 桌面出现。

- **b** 关闭任何已打开的程序。
- **a** Turn on your computer, login if necessary, and then wait for the desktop to appear.
- **b** Close any open programs.

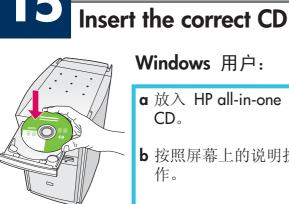

Windows 用户:

放入适当的光盘

- a 放入 HP all-in-one Windows CD.
- **b** 按照屏幕上的说明执行操 作。

Windows Users:

- a Insert the HP all-in-one Windows CD.
- **b** Follow the onscreen instructions.

如果没有出现启动屏幕,请依次双击"我的电 脑"、"CD-ROM"图标和 "setup.exe"。

If the startup screen does not appear, double-click My Computer, double-click the CD-ROM icon, and then double-click setup.exe.



Macintosh 用户:

放入 HP all-in-one Macintosh CD。在安装软件 之前,请转至下一步。

Macintosh Users:

Insert the HP all-in-one Macintosh CD. Go to the next step before installing software.



Windows 用户:

您可能需要等待几分钟,才能在屏幕上看到连接 USB 电缆的提示。

当出现上述提示后,请将 USB 电缆的一端连接到 HP all-in-one 背面的端口中,然后再将电缆的另一 端连接到计算机上任意的 USB 端口中。

Windows Users:

You may have to wait several minutes before you see the onscreen prompt to connect the USB cable.

Once the prompt appears, connect the USB cable to the port on the back of the HP all-in-one, and then to **any USB port** on your computer.

Macintosh 用户:

将 USB 电缆的一端连接到 HP all-in-one 背面的端口中,然后再将电缆的另一端连接 到计算机上任意的 USB 端口中。

Macintosh Users:

Connect the USB cable to the port on the back of the HP all-in-one, and then to **any USB port** on your computer.

1. Make are the used on the USB calc


I Consist the USB calc

 
I Consist the USB calc


I Department of the USB calc

I

If you do not see these screens, see **Troubleshooting** in the last section.

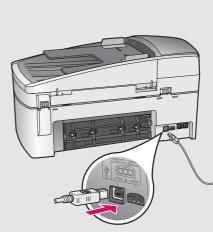



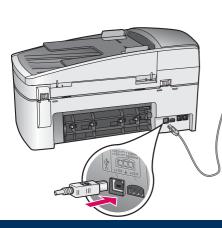




继续安装软件

Continue software installation

Windows 用户:

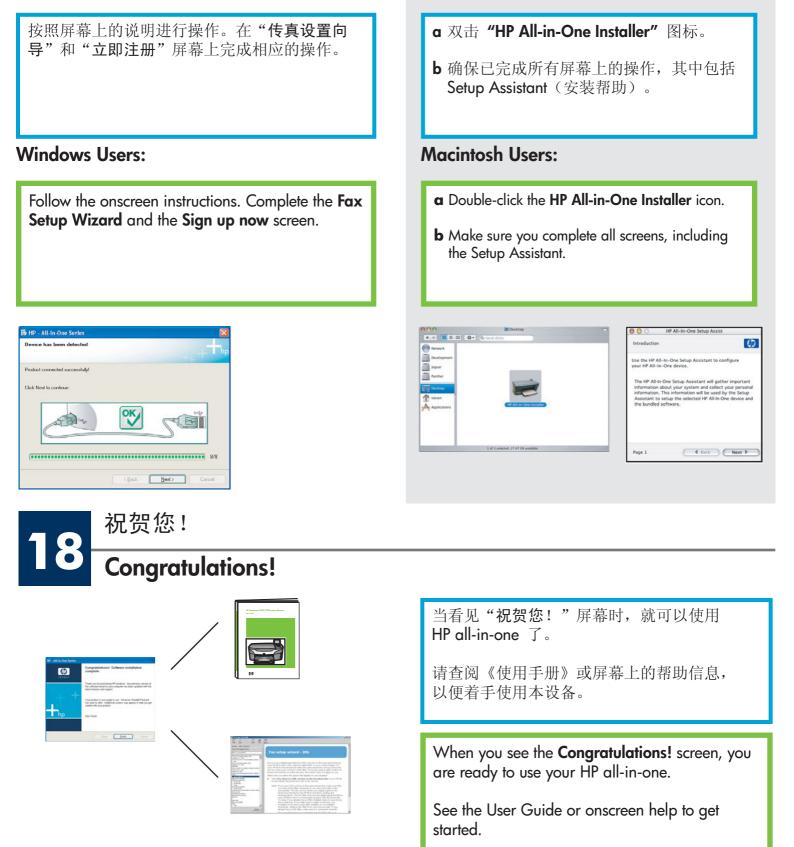

Macintosh 用户:



www.hp.com/support



有关详细信息,请参阅《使用手册》。本书是用再生纸印刷的。欲寻求帮助,请访问 www.hp.com/support。

© Copyright 2004 Hewlett-Packard Development Company, L.P. Printed in [].

Troubleshooting



Problem: A **Carriage Jam** message appears after you press the On button. Action: Open the access door. Remove the orange shipping lock from inside. Press the **OK** button. **Problem:** The **Remove and check print cartridges** message appears after you insert print cartridges or the print cartridge alignment fails. Action: Remove print cartridges. Make sure you remove all tape from copper contacts. Re-insert the cartridges, and then close the access door. **Problem:** (Windows only) You did not see the screen telling you when to connect the USB cable. Action: Remove, and then re-insert the HP all-in-one **Windows** CD. Refer to Step 15. **Problem:** (Windows only) The Microsoft Add Hardware screen appears. E S Click Cancel. Unplug the USB cable, and then insert the HP all-in-one Action: Windows CD. Refer to Steps 15 and 16. **Problem:** (Windows only) The **Device Setup Has Failed To Complete** screen appears. Action: Verify that the control-panel overlay is firmly attached. Unplug the device and plug it in again. Check all connections. Make sure the USB cable is plugged into the computer. Do not plug the USB cable into a keyboard or non-powered hub. Refer to Steps 4 and 16. (Macintosh only) The Macintosh software does not install. **Problem:** Alert There are no devices connected or the device connected is not supported by this installer. Action: Make sure the USB cable is plugged into the computer before installing the software. Do not plug the USB cable into a keyboard or nonpowered hub. Refer to Step 16.

Refer to the User Guide for more information. Printed on recycled paper. Visit www.hp.com/support for assistance.

