




快速调试 Quick commissioning

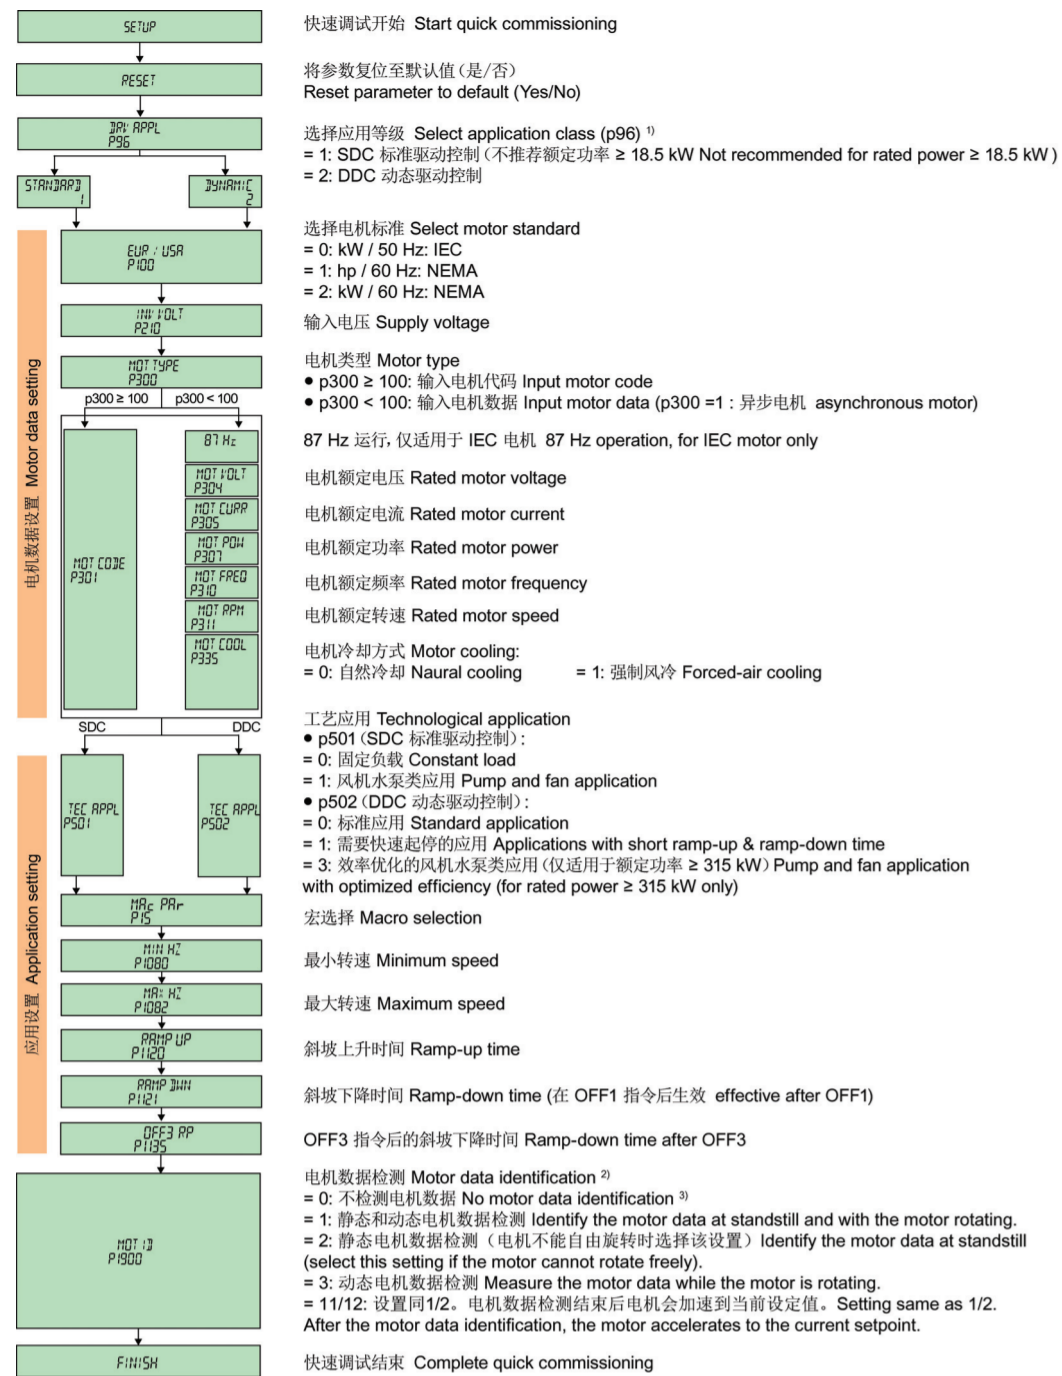

1)有关“专家”应用等级的详细信息,参见操作说明。For information about application class “expert”, see Operating Instructions.
2)如果选择检测电机数据,电机会在 JOG 时运行。If motor identification is selected, the motor will rotate when jogging.
3)如果未连接电机,设 p1900 为 0。Set p1900 to 0 if no motor is connected.

参数列表 Parameters list

Parameters list table with columns: Parameter, Description, and sub-sections for Converter and motor monitoring parameters, Motor control parameters, and Motor control parameters (CDS and DDS).

变频器及电机监视参数 Converter and motor monitoring parameters

Table of converter and motor monitoring parameters including r0018, r0021, r0025, r0026, r0027, r0031, r0032, r0035, r0067, r0076, r0077, r0079, r0080, r0206, r0207, r0208, r0209, r0752, r0755, r0774.

故障/报警/监控参数 Faults/warning/monitoring parameters

Table of fault/warning/monitoring parameters including r0947, r2110, r2110, and option parameters p0230.

选项参数 Option parameters

Table of option parameters including p0230 with detailed description of drive filter type and motor side options.

固定频率参数 Fixed frequency parameters

Table of fixed frequency parameters including selection mode p1016 with descriptions for speed setpoint selection modes.


其他变频器及电机特性参数 Other converter and motor feature parameters

Table of other converter and motor feature parameters including p0003, p0308, p0309, p0335, p0340, p0604, p0640, p1035, p1036, p1040, p1050, p1055, p1056, p1058, p1059, p1135, p1310, p1312, p1800, p1900.

I/O 命令/二进制 I/O 参数 I/O commands/binary I/O parameters

Table of I/O commands and binary I/O parameters including r0050, r0051, r0052, r0722, p0730, p0732, p0733.

PID 控制参数 PID control parameters

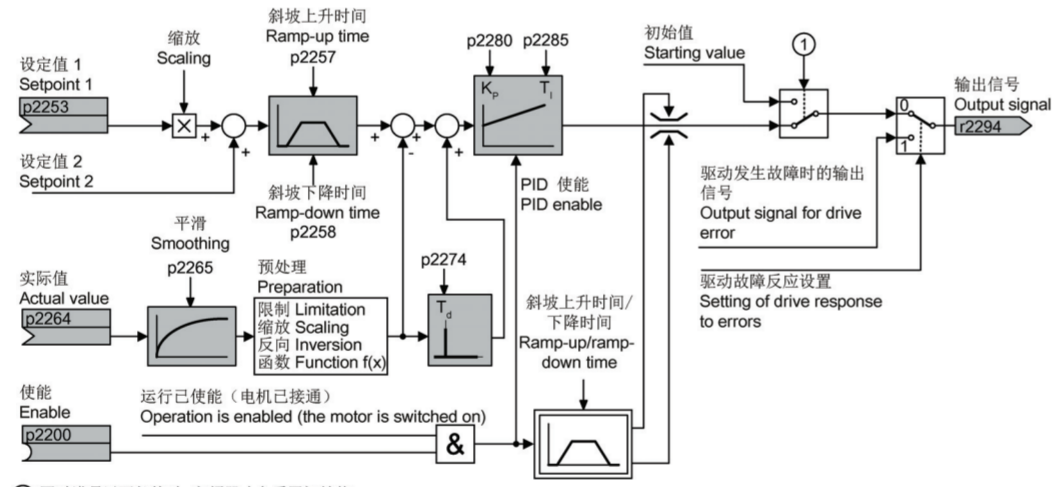

同时满足以下条件时,变频器才会采用初始值:
PID 提供主设定值 (p2251 = 0)。
PID 的斜坡函数发生非输出端没有到达初始值。
The converter uses the starting value when all the following conditions are simultaneously satisfied:
The PID supplies the main setpoint (p2251 = 0).
The ramp-function generator output of the PID has not yet reached the starting value.

Table of PID control parameters including p2200, p2253, p2254, p2255, p2256, p2257, p2258, p2264, p2265, p2269, p2274, p2280, p2285, p2294.

通讯参数 Communication parameters

Table of communication parameters including p2000, p2002, p2010, p2011, p2021, p2023, p2011, p2021, p2023, p2011, p2021, p2023.

故障与报警 Faults and alarms

故障列表 Fault list

Table of faults and alarms including F01030, F01910, F03505, F07011, F07080, F07320, F07445, F07801, F07802, F07807, F07860, F07861, F07862, F07900.

报警列表 Alarm list

Table of alarms including A05006, A07321, A07400, A07401, A07402, A07409, A07444.

备注 Notes

如果需要,可在此空白处记下变频器调试过程中的注意事项。
If desired, use this space to take some notes during the commissioning.